

Pulling ATTACHMENTS

1 1/2" - 9" Jaw Spreads


Recommended for the removal of bearings, bearing cups, bushings and oil seals.

- Handles internal pulling jobs, such as, bearing/bearing cup removal, bushing removal, oil seals, etc.
- Remove hard to get at parts easily and without damage!
- Use with corresponding Power Team Slide Hammer or Push-Puller.*
- Adjustable jaws fit various diameters

Fed. Spec.: GGG-P-00781-D



BEARING MAINTENANCE

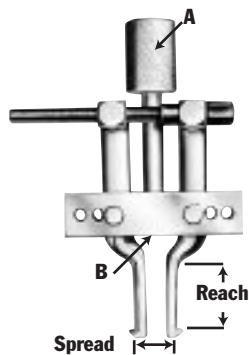

CAUTION – These attachments may not withstand the full tonnage of the pullers they are used with. The shape and condition of the part being pulled affects the tonnage at which the jaws may slip off. Always select the largest attachment which will fit behind the part being pulled. Refer to page 203.

Order No.	Jaw		A (in. - thd.)	B (in. - thd.)	Wt. (lbs.)	Application
	Spread (in.)	Reach (in.)				
1153	1 1/2-5	2 1/8	1-14	5/8-18	4 lbs., 4 oz.	Use with Nos. 927 and 938 Push-Pullers, 1155 and 1156 slide hammer pullers, or 24832 and 24833 puller screw.
1150	1 1/2-6	4	1-14	5/8-18	4 lbs., 4 oz.	
1151	1 1/2-7	5 1/4	1-14	5/8-18	4 lbs., 8 oz.	
1152	1 1/2-6	4	-	5/8-18	3 lbs., 8 oz.	Use with No. PPH17.
1154	1 1/2-6	4	1-8	5/8-18	4 lbs., 8 oz.	
1165	3-9	5 7/8	1 1/2-12	1-14	13 lbs., 8 oz.	
1166	3-9	5 7/8	1 1/4-7	1-14	13 lbs., 8 oz.	
Puller Screws						
24832	13 3/4 long		5/8-18	1 lb.	Use with Nos. 1150, 1151, 1152, and 1153. Acts as a regular forcing screw when threaded directly into block of pulling attachment.	
24833	5 1/2 long		5/8-18	6 oz.	Use with Nos. 1150, 1152, and 1153. Acts as a regular forcing screw when threaded directly into block of pulling attachment.	




Pulling ATTACHMENTS

Bearing & Pulley


- “Knife-like” edges fit behind bearings and other hard-to-grip parts for easy removal, even where clearance is limited.
- Usable with both Grip-O-Matic® jaw type pullers and Push-Pullers®.
- All puller blocks are made from forged alloy steel

Fed. Spec.: GGG-P-00781-D

Used where space does not permit hooking puller jaws directly on part to be pulled.

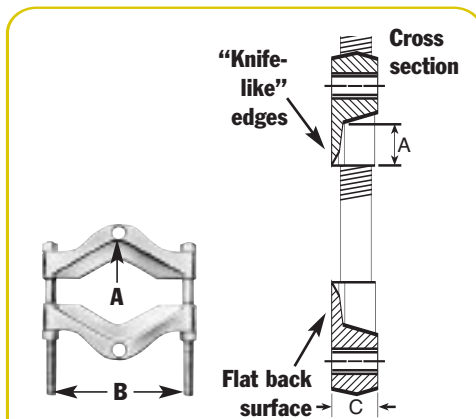

 Attachment clamps down into V-groove to distribute load. Use with Grip-O-Matic® pullers or Push-Pullers.




Order No.	Max. Spread (in.)	Min. Spread (in.)	A (in.)	B (in.)	Wt.	Application - (Use with Puller Nos.)
1121	15/16"	1/4"	5/16"-18	1 11/16"	12 oz.	1020, 1022, and 1023.
1122	2"	1/8"	3/8"-16	2 7/16"	1 lb., 4 oz.	1024, 1025, 1026, 1027, 7392 and 7393.
1123	4 5/8"	1/2"	5/8"-18	4 3/8"	5 lbs.	1035, 1036, 1037, 1038, and 927.
1124	5 3/4"	1/2"	5/8"-18	6"	12 lbs.	1035, 1040, 1041, 1042, PH172, PPH17, and 938.
1126	8"	5/8"	1"-14	7 1/2"	19 lbs., 12 oz.	1047, 1043, and 939.
1127	13 3/8"	3/4"	1"-14	10 1/4"	41 lbs., 12 oz.	1047, 1073, and 939.
1128	12 7/8"	5"	1 3/4"-12	13"	100 lbs.	PH302*, PH502*, PH553C, and PPH50. (When using 1128 with PPH50, two 8024 adapter are required to connect PPH50 to the puller tees.)
1129	16 3/4"	6"	1 3/4"-12	16 3/4"	197 lbs.	1079 and 1077. (se No. 8024 adapter to connect legs of 1077 to puller tees of 1129)
1130	9"	1/2"	5/8"-18	6"	12 lbs., 9 oz.	1035, 1040, 1041, 1042, PH172, PPH17, and 938.
V-belt pulley pulling attachments						
679	5 7/8"	1 3/4"	5/8"-18	6"	4 lbs., 4 oz.	1035, 1036, 1037, 1038, and 927.
680	10"	1 5/8"	5/8"-18	10 1/16"	22 lbs., 4 oz.	1039, 1040, 1041, 1042, 1047, PH172, PPH30* and 938. (When using 680 with PPH30, two 8012 adapters are required.)

Pulling attachment accessory – “Knife-like” edges of attachment fit behind bearings or other parts for easy removal with “Enforcer 55”, even if space does not permit hooking puller jaws directly to part being pulled.

No. 1128 – Spread: 5" to 12 7/8". Wt., 100 lbs.

* Indicates discontinued puller model.

CAUTION: Please refer to page 203.

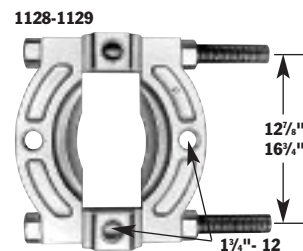

BEARING MAINTENANCE